



MOUNTING GUIDE

WOODUPP

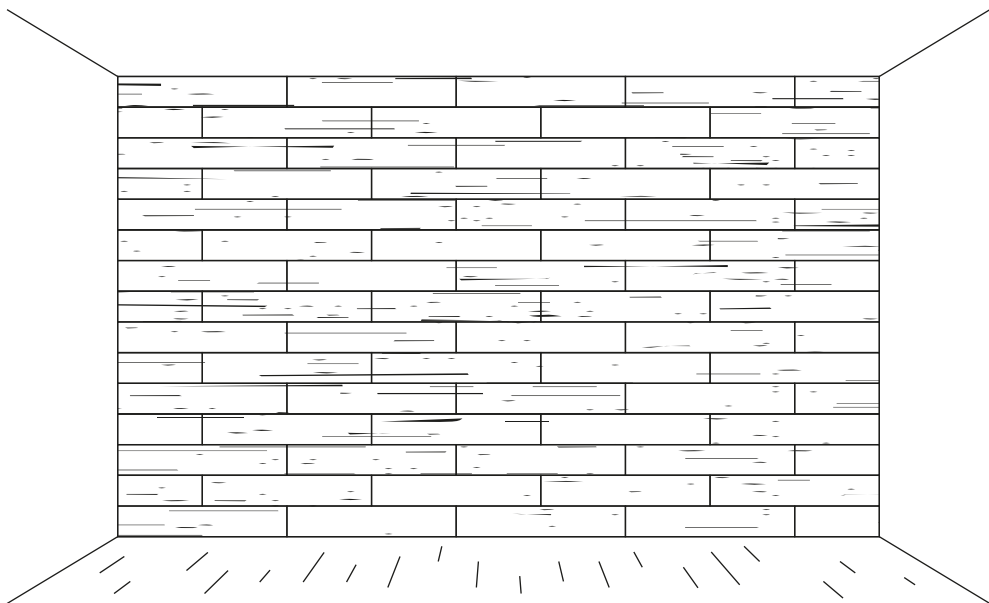

TOOLS YOU WILL NEED:

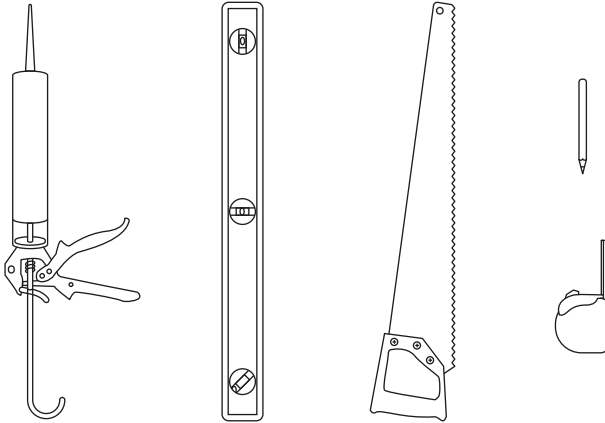

+


WOOD  UPP

PREPARE YOUR WALL:

Prepare your surface for WoodUpp:

- Remove all nails and screws that should hang loose on the surface.
- Clean the surface with soap water to remove any dust and filth.
- Make sure the surface is completely dry.


Dimensions of panel:

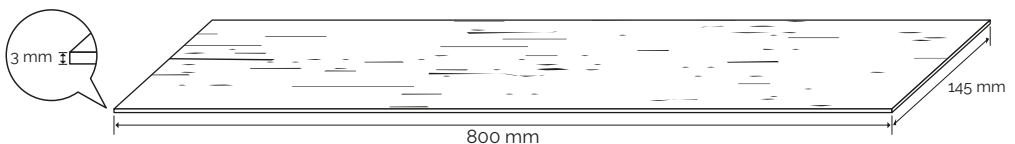

APPLICATION OF ADHESIVE:

By using WoodUpp Adhesive you can glue WoodUpp to almost any surface with ease. If you are in doubt if WoodUpp is applicable for your particular surface do not hesitate to contact us, and we will give our recommendations.

How to apply WoodUpp Adhesive:

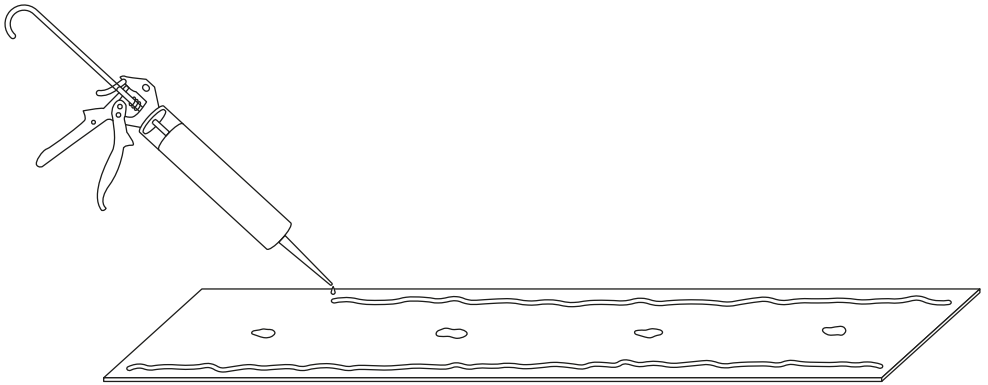

Apply a stripe of about 6 mm adhesive in top and bottom of the panel, and 4-5 dots in the middle. Keep the adhesive at least 1 cm from the edge. For very rough surfaces a bit more adhesive can be applied.

For the best result the following can be considered:


WoodUpp has many naturally occurring characteristics as colour variations, knots, cracks, saw marks, and more. This characterizes organic material, and helps in achieving a natural and rustic look.

- Thus, have more panels ready to choose from during mounting.
- Mix colour, texture, knots, and more to create a varying pattern.

You are now ready to begin the mounting of your WoodUpp wall.


1. DRAW YOUR REFERENCE LINE

Using a level draw a straight line on your wall as reference for the first row of WoodUpp panels.

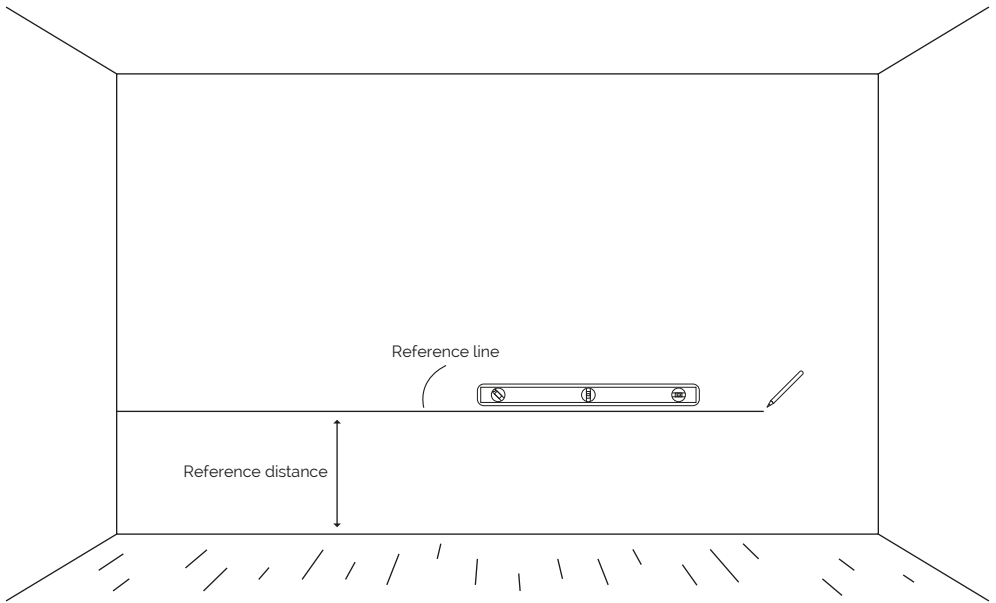


2. USE YOUR REFERENCE LINE

Mount WoodUpp panels on each side of the reference line with the ends displaced.

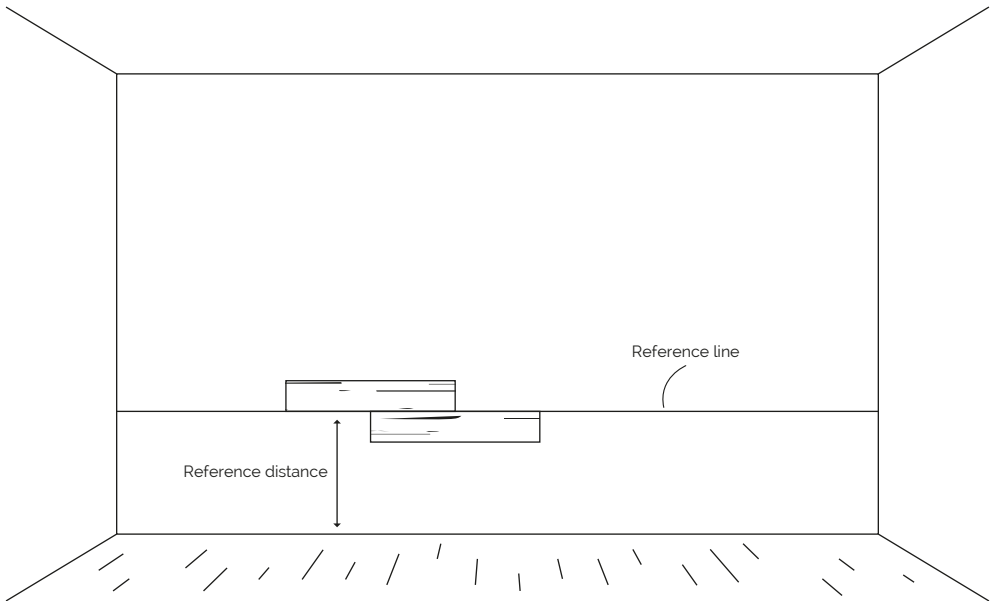


3. CONTINUE YOUR REFERENCE LINE

Keep mounting panels on both sides of the reference line displaced from end to end. Keep the panels level by following the reference line.

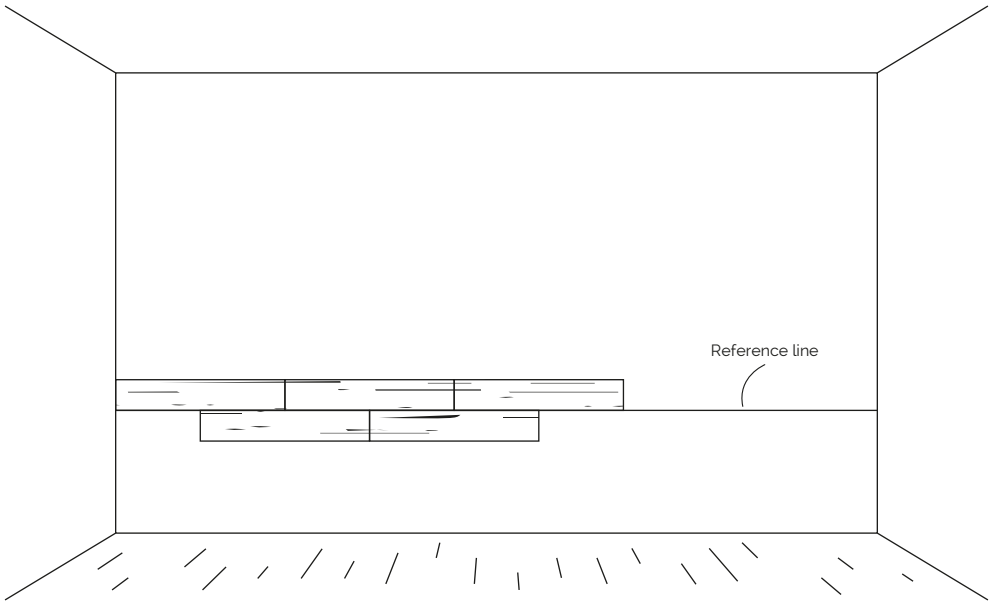


4. COMPLETE YOUR REFERENCE LINE

Keep mounting panels on both sides of the reference line until the reference row is done. If necessary, saw the panels to fit with the adjoining panels and the ends of your wall.

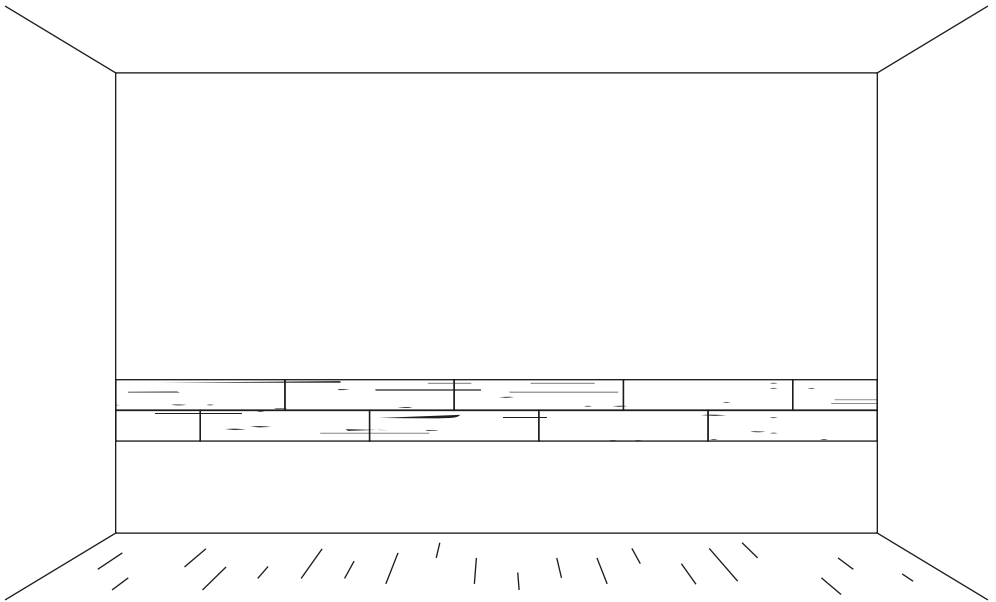

5. COMPLETE YOUR WALL

Keep mounting panels, still displaced from end to end - one row at a time. If necessary, saw the panels to fit with the adjoining panels and the ends of your wall.

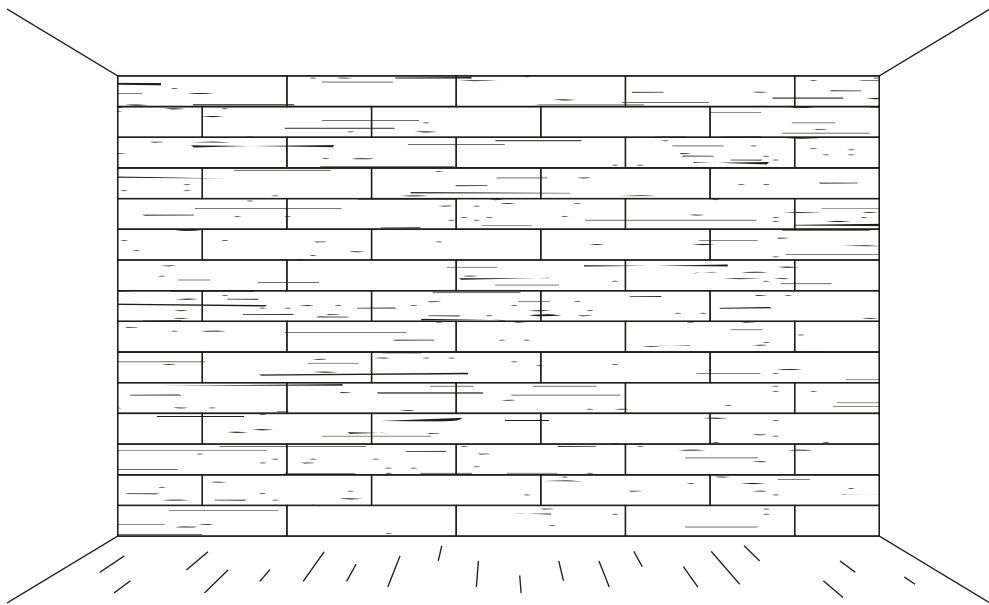

YOU ARE NOW DONE!

CONGRATULATIONS WITH YOUR NEW WOODUPP WALL!